

Loading/Unloading



FUNCTION DESCRIPTION

It is used for loading or unloading. Its internal manipulator grabs materials from the incoming tray or grabs materials from the upstream line body and puts them into the empty tray.

Model	Axis Motion Repeatability	Max Tray Size	Manipulator Movement Range
M7116925-00	$\pm 0.03\text{mm}$	400*600mm	Customized to tray

ADAPTIVE UNIT

